


## HOW TO MEASURE FOR A BYPASS OR TRIPANEL SLIDING DOOR

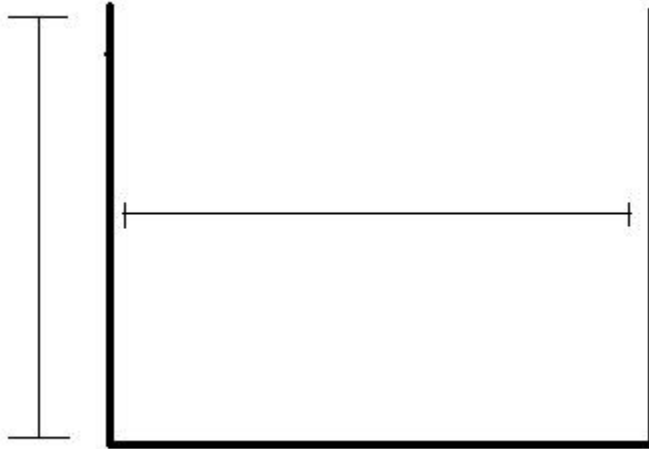

**IMPORTANT:** ONLY USE FINISHED CENTERLINE DIMENSIONS.

MEASURE OVERALL WIDTH FROM FINISHED WALL TO FINISHED WALL AT  
TOP, MIDDLE, AND BOTTOM.

MEASURE HEIGHT FROM TOP OF THRESHOLD TO  
DESIRED OVERALL HEIGHT.

### **NOTE: FOR STEAM APPLICATION...**

Only Pacer or Prestige framed bypass doors are available for steam. Showerhead location must be provided. Tripanels, frameless bypass, Tryton and Euro doors are not available for steam. Bypass doors are only 90% steam tight. Some steam will escape.