


HOW TO MEASURE FOR A BYPASS WITH 90 DEGREE RETURN ON KNEEWALL

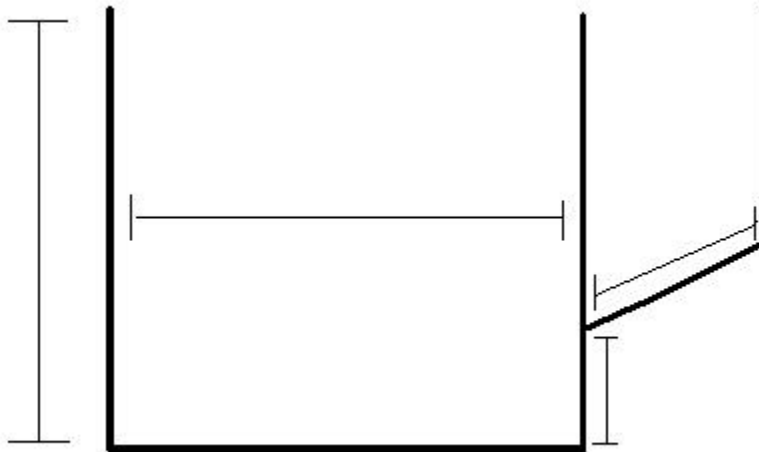

IMPORTANT: ONLY USE FINISHED CENTERLINE DIMENSIONS.

MEASURE BYPASS WIDTH FROM FINISHED WALL TO FINISHED WALL AT
TOP AND BOTTOM OF KNEEWALL

MEASURE RETURN FROM BACK WALL TO CENTER OF
BYPASS THRESHOLD.

MEASURE HEIGHT FROM TOP OF THRESHOLD TO
DESIRED OVERALL HEIGHT, and

MEASURE RETURN HEIGHT FROM TOP OF THRESHOLD TO TOP OF
KNEEWALL.

NOTE: DO NOT PROVIDE DESIRED PANEL HEIGHT;
MUST HAVE KNEEWALL HEIGHT.

NOTE: FOR STEAM APPLICATION...

Only Pacer or Prestige framed bypass doors are available for steam. Showerhead location must be provided. Tripanels, frameless bypass, Tryton and Euro doors are not available for steam. Bypass doors are only 90% steam tight. Some steam will escape.