


HOW TO MEASURE FOR A BYPASS WITH INLINE PANEL ON A KNEEWALL

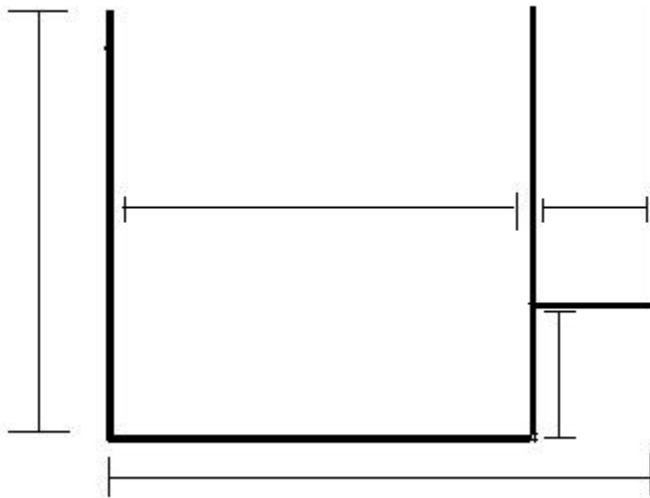

IMPORTANT: ONLY USE FINISHED CENTERLINE DIMENSIONS.

MEASURE OVERALL WIDTH FROM FINISHED WALL TO FINISHED WALL AT TOP, MIDDLE, AND BOTTOM.

MEASURE BYPASS WIDTH FROM FINISHED WALL TO KNEEWALL AT TOP AND BOTTOM OF KNEEWALL.

MEASURE HEIGHT FROM TOP OF THRESHOLD TO DESIRED OVERALL HEIGHT.

MEASURE INLINE HEIGHT FROM TOP OF THRESHOLD TO TOP OF KNEEWALL—DO NOT PROVIDE PANEL HEIGHT, PROVIDE KNEEWALL HEIGHT.

NOTE: FOR STEAM APPLICATION...

Only Pacer or Prestige framed bypass doors are available for steam. Showerhead location must be provided. Tripanels, frameless bypass, Tryton and Euro doors are not available for steam. Bypass doors are only 90% steam tight. Some steam will escape.