


HOW TO MEASURE FOR A BYPASS WITH FULL HEIGHT INLINE AND RETURN PANELS

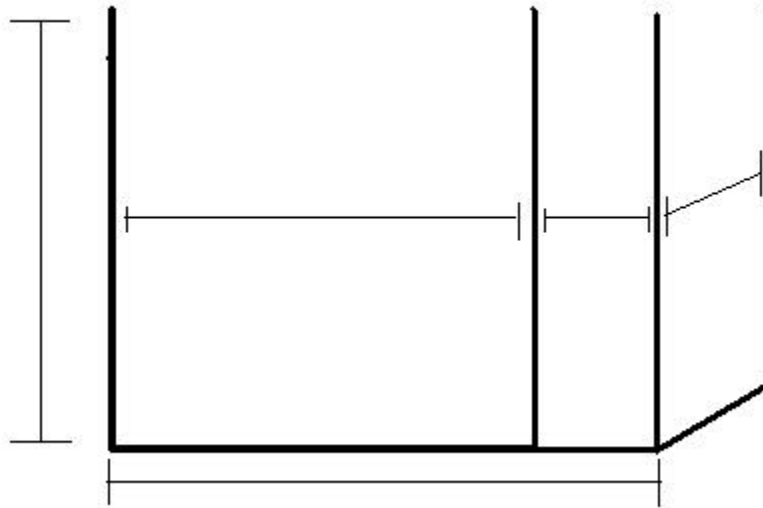

IMPORTANT: ONLY USE FINISHED CENTERLINE DIMENSIONS.

MEASURE OVERALL WIDTH FROM FINISHED WALL TO CENTER OF RETURN THRESHOLD AT TOP, MIDDLE, AND BOTTOM.

MEASURE BYPASS WIDTH SEPARATELY. WHENEVER POSSIBLE, DOORS WILL BE MADE TO A STANDARD SIZE UNLESS OTHERWISE SPECIFIED.

MEASURE RETURN FROM BACK WALL TO CENTER OF BYPASS THRESHOLD.

MEASURE HEIGHT FROM TOP OF THRESHOLD TO DESIRED OVERALL HEIGHT.

NOTE: FOR STEAM APPLICATION...

Only Pacer or Prestige framed bypass doors are available for steam. Showerhead location must be provided. Tripanels, frameless bypass, Tryton and Euro doors are not available for steam. Bypass doors are only 90% steam tight. Some steam will escape.