


# HOW TO MEASURE FOR A BYPASS WITH FULL HEIGHT INLINE PANEL AND RETURN PANEL ON A KNEEWALL

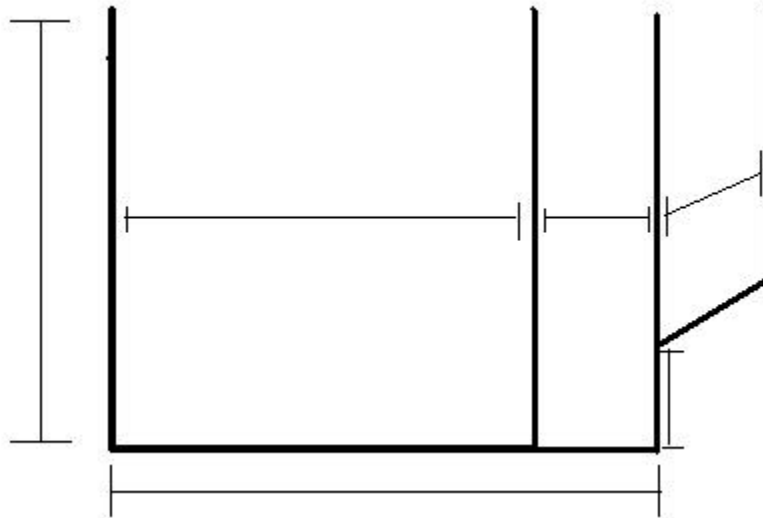

**IMPORTANT:** ONLY USE FINISHED CENTERLINE DIMENSIONS.

MEASURE OVERALL WIDTH FROM FINISHED WALL TO FINISHED WALL AT  
TOP AND BOTTOM OF KNEEWALL.

MEASURE BYPASS WIDTH SEPARATELY.

MEASURE RETURN FROM BACK WALL TO CENTER OF  
BYPASS THRESHOLD.

MEASURE HEIGHT FROM TOP OF THRESHOLD TO  
DESIRED OVERALL HEIGHT.

MEASURE RETURN HEIGHT FROM TOP OF THRESHOLD TO TOP OF  
KNEEWALL; DO NOT PROVIDE PANEL HEIGHT.

**NOTE: FOR STEAM APPLICATION...**

Only Pacer or Prestige framed bypass doors are available for steam. Showerhead location must be provided. Tripanels, frameless bypass, Tryton and Euro doors are not available for steam. Bypass doors are only 90% steam tight. Some steam will escape.