


HOW TO MEASURE FOR A BYPASS WITH BOTH INLINE PANEL AND RETURN PANEL ON A KNEEWALL

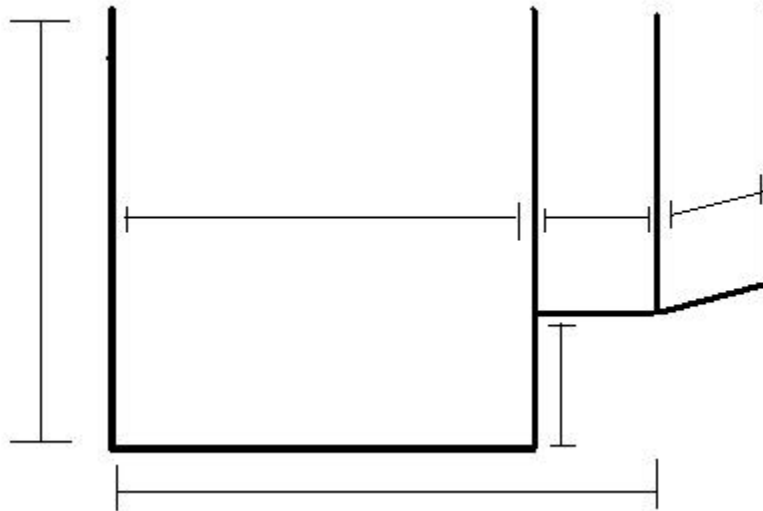

IMPORTANT: ONLY USE FINISHED CENTERLINE DIMENSIONS.

MEASURE OVERALL WIDTH FROM FINISHED WALL TO CENTERLINE OF RETURN THRESHOLD AT TOP, MIDDLE, AND BOTTOM.

MEASURE BYPASS WIDTH SEPARATELY, FROM FINISHED WALL TO FINISHED KNEEWALL AT TOP & BOTTOM OF KNEEWALL.

MEASURE RETURN FROM BACK WALL TO CENTER OF BYPASS THRESHOLD.

MEASURE HEIGHT FROM TOP OF THRESHOLD TO DESIRED OVERALL HEIGHT.

MEASURE RETURN HEIGHT FROM TOP OF THRESHOLD TO TOP OF KNEEWALL; DO NOT PROVIDE PANEL HEIGHT.

NOTE: FOR STEAM APPLICATION...

Only Pacer or Prestige framed bypass doors are available for steam. Showerhead location must be provided. Tripanels, frameless bypass, Tryton and Euro doors are not available for steam. Bypass doors are 90% steam tight. Some steam will escape.