


HOW TO MEASURE FOR A CORNER ENTRY DOOR

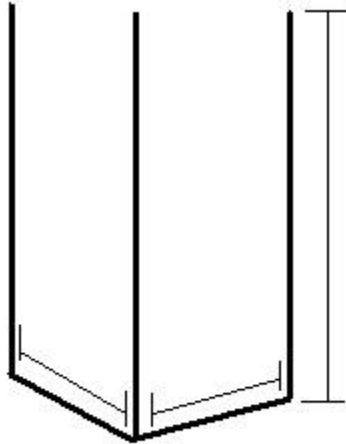

IMPORTANT: ONLY USE FINISHED CENTERLINE DIMENSIONS.

MEASURE ALONG CENTER OF THRESHOLD FROM BACK WALL TO CORNER OF DOOR, THEN FROM CENTER OF DOOR TO REMAINING BACK WALL.

MEASURE ON CENTER OF THRESHOLD.

MEASURE HEIGHT FROM TOP OF THRESHOLD TO
DESIRED OVERALL HEIGHT.