


HOW TO MEASURE FOR A SWING OUT DOOR WITH FULL HEIGHT INLINE PANEL

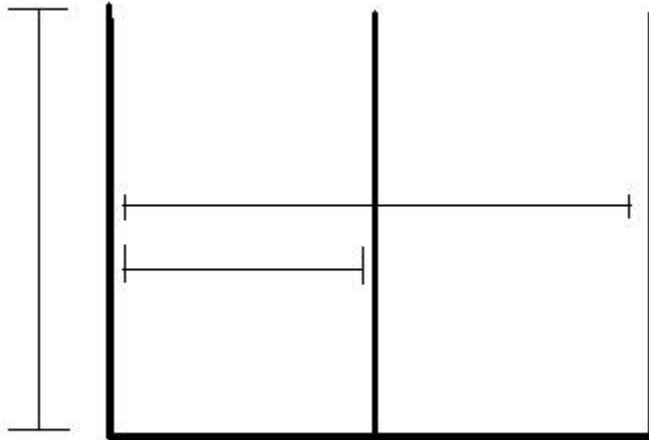

IMPORTANT: ONLY USE FINISHED CENTERLINE DIMENSIONS.

MEASURE OVERALL WIDTH FROM FINISHED WALL TO FINISHED WALL AT
TOP, MIDDLE, AND BOTTOM.

PROVIDE DESIRED WIDTH OF DOOR, NOT TO EXCEED 36",

OR

PROVIDE DESIRED WITH OF PANEL, NOT LESS THAN 7".

OTHERWISE

DOOR WILL BE MADE TO A STANDARD SIZE.

MEASURE HEIGHT FROM TOP OF THRESHOLD TO
DESIRED OVERALL HEIGHT.

PROVIDE HINGE OR PIVOT LOCATION
(LEFT OR RIGHT, OFF WALL OR OFF PANEL).