


## HOW TO MEASURE FOR A SWING OUT DOOR WITH INLINE PANEL

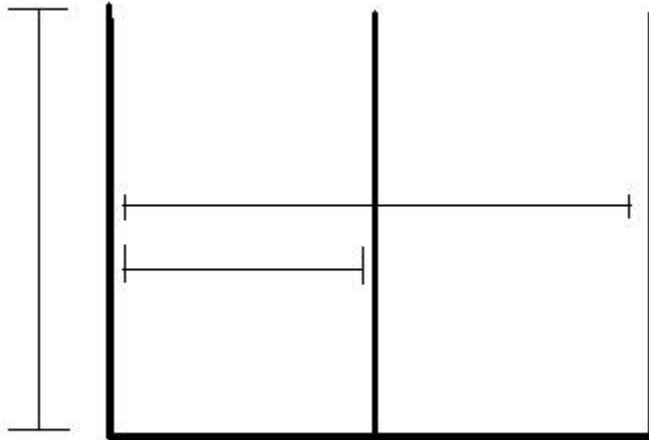

**IMPORTANT:** ONLY USE FINISHED CENTERLINE DIMENSIONS.

MEASURE OVERALL WIDTH FROM FINISHED WALL TO FINISHED WALL AT  
TOP, MIDDLE, AND BOTTOM.

PROVIDE DESIRED WIDTH OF DOOR, NOT TO EXCEED 36",

**OR**

PROVIDE DESIRED WIDTH OF PANEL, NOT LESS THAN 7".

**OTHERWISE**

DOOR WILL BE MADE TO STANDARD SIZE.

MEASURE HEIGHT FROM TOP OF THRESHOLD TO  
DESIRED OVERALL HEIGHT.

PROVIDE HINGE OR PIVOT LOCATION  
(EITHER LEFT OR RIGHT, OFF WALL OR OFF PANEL).