


HOW TO MEASURE FOR A HINGE DOOR WITH FULL HEIGHT INLINE AND A RETURN PANEL ON A KNEEWALL

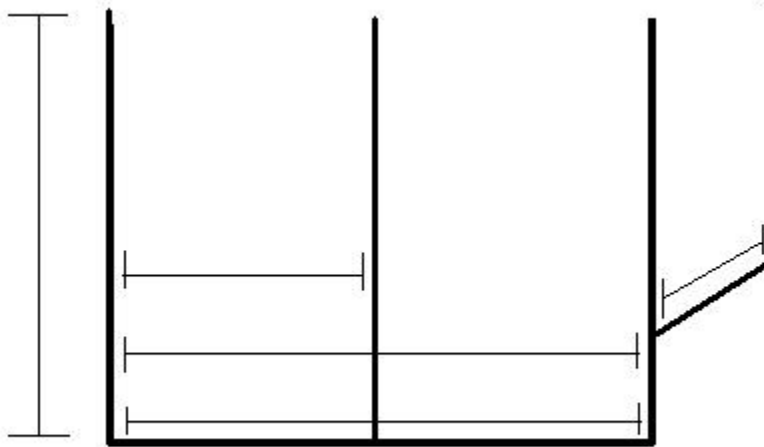

IMPORTANT: ONLY USE FINISHED CENTERLINE DIMENSIONS.

MEASURE OVERALL WIDTH FROM FINISHED WALL TO FINISHED
KNEEWALL AT TOP AND BOTTOM OF KNEEWALL

PROVIDE DESIRED WIDTH OF DOOR, NOT TO EXCEED 36",

OR

PROVIDE DESIRED WIDTH OF PANEL, NOT LESS THAN 7".

OTHERWISE

DOOR WILL BE MADE TO A STANDARD SIZE.

MEASURE HEIGHT FROM TOP OF THRESHOLD TO
DESIRED OVERALL HEIGHT.

MEASURE RETURN PANEL FROM BACK WALL TO
CENTER OF THRESHOLD, PANEL TO BE BETWEEN 7" – 36".

MEASURE RETURN HEIGHT FROM TOP OF THRESHOLD TO TOP OF
KNEEWALL. DO NOT PROVIDE DESIRED PANEL HEIGHT.

PROVIDE HINGE LOCATION
(EITHER LEFT OR RIGHT, OFF WALL, OFF INLINE, OR OFF RETURN).

THIS UNIT IS NOT AVAILABLE USING A PIVOT DOOR.