


HOW TO MEASURE FOR A DOOR WITH INLINE PANEL ON A KNEEWALL

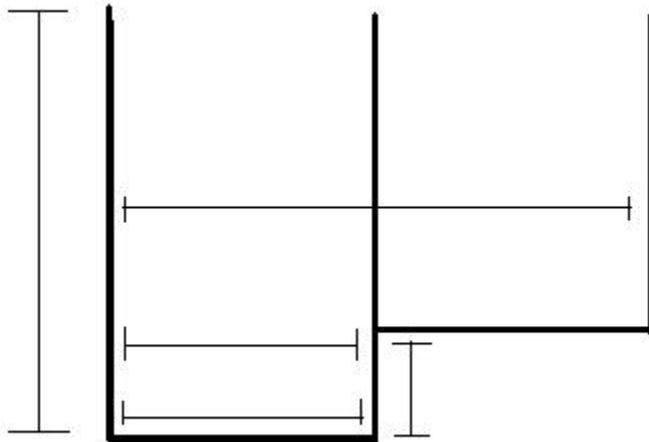

IMPORTANT: ONLY USE FINISHED CENTERLINE DIMENSIONS.

MEASURE OVERALL WIDTH FROM FINISHED WALL TO FINISHED WALL AT TOP, MIDDLE, AND BOTTOM.

MEASURE WIDTH OF DOOR TO KNEEWALL AT TOP AND BOTTOM OF KNEEWALL

MEASURE HEIGHT FROM TOP OF THRESHOLD TO DESIRED OVERALL HEIGHT.

MEASURE INLINE HEIGHT FROM TOP OF THRESHOLD TO TOP OF KNEEWALL—DO NOT PROVIDE PANEL HEIGHT, PROVIDE KNEEWALL HEIGHT.

PROVIDE HINGE LOCATION
(EITHER LEFT OR RIGHT, OFF WALL OR OFF PANEL).

**PIVOT DOORS MUST SWING OFF WALL;
THEY CANNOT PIVOT OFF PANEL .**