


# HOW TO MEASURE FOR A SWING OUT DOOR WITH RETURN PANEL ON KNEEWALL

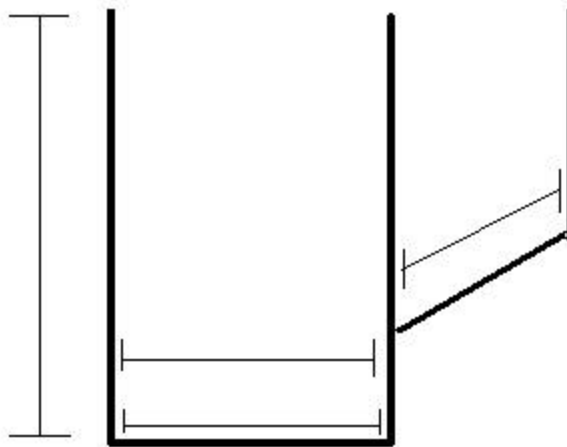

**IMPORTANT:** ONLY USE FINISHED CENTERLINE DIMENSIONS.

MEASURE DOOR WIDTH FROM FINISHED WALL TO FINISHED KNEEWALL  
AT TOP AND BOTTOM OF KNEEWALL.

MEASURE DEPTH OF RETURN PANEL FROM BACK WALL TO  
CENTER OF THRESHOLD.

MEASURE OVERALL HEIGHT FROM TOP OF THRESHOLD TO  
DESIRED OVERALL HEIGHT.

MEASURE RETURN HEIGHT FROM TOP OF THRESHOLD TO TOP OF  
KNEEWALL. DO NOT PROVIDE PANEL HEIGHT, PROVIDE KNEEWALL  
HEIGHT.

PROVIDE HINGE LOCATION  
(EITHER LEFT OR RIGHT, OFF WALL OR OFF PANEL).