


## HOW TO MEASURE FOR AN INFOLD

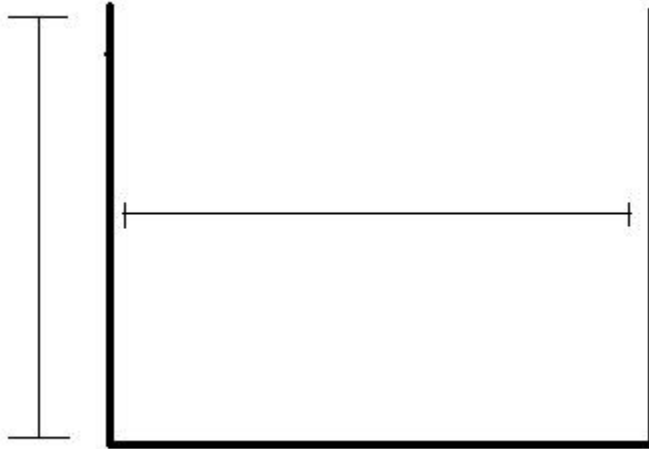

**IMPORTANT:** ONLY USE FINISHED CENTERLINE DIMENSIONS.

MEASURE OVERALL WIDTH FROM FINISHED WALL TO FINISHED WALL AT  
TOP, MIDDLE, AND BOTTOM.

MEASURE HEIGHT FROM TOP OF THRESHOLD TO  
DESIRED OVERALL HEIGHT.

MUST PROVIDE HINGE LOCATION