


## HOW TO MEASURE FOR A NEO ANGLE DOOR WITH A KNEEWALL

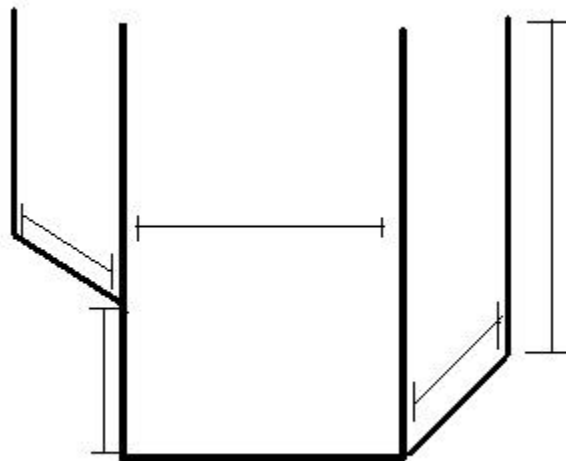

**IMPORTANT:** ONLY USE FINISHED CENTERLINE DIMENSIONS.

MEASURE ALONG CENTER OF THRESHOLD FROM BACK WALL TO CORNER OF DOOR, THEN ALONG CENTER OF DOOR, THEN FROM CORNER OF DOOR TO OTHER BACK WALL.

ALWAYS MEASURE ON CENTER OF THRESHOLD.

MEASURE HEIGHT FROM TOP OF THRESHOLD TO DESIRED OVERALL HEIGHT.

PROVIDE KNEEWALL HEIGHT BY MEASURING FROM TOP OF THRESHOLD TO TOP OF KNEEWALL—DO NOT PROVIDE PANEL HEIGHT, PROVIDE KNEEWALL HEIGHT.

PROVIDE ANGLE THAT DOOR MEETS WALL, DOOR MEETS PANEL, AND PANEL MEETS WALL.

PROVIDE HINGE LOCATION  
(EITHER LEFT OR RIGHT, OFF WALL OR OFF PANEL).