


HOW TO MEASURE FOR A NEO ANGLE DOOR LESS 1 PANEL

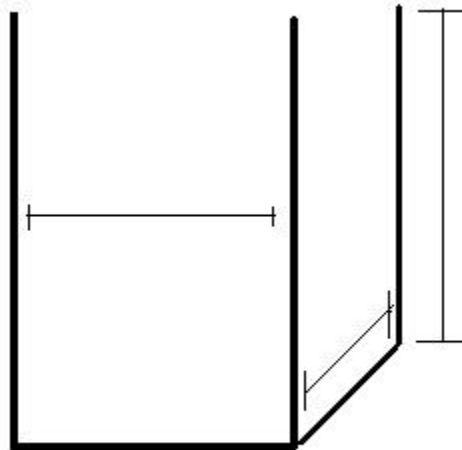

IMPORTANT: ONLY USE FINISHED CENTERLINE DIMENSIONS.
MEASURE ALONG CENTER OF THRESHOLD FROM BACK WALL TO CORNER
OF DOOR, THEN ALONG CENTER OF DOOR TO REMAINING WALL.

MEASURE ON CENTER OF THRESHOLD.

MEASURE HEIGHT FROM TOP OF THRESHOLD TO
DESIRED OVERALL HEIGHT.

PROVIDE ANGLE THAT DOOR MEETS WALL, DOOR MEETS PANEL, AND
PANEL MEETS WALL.

PROVIDE HINGE LOCATION
(EITHER LEFT OR RIGHT, OFF WALL OR OFF PANEL).