


## HOW TO MEASURE FOR A SWING OUT DOOR WITH 2 INLINE PANELS

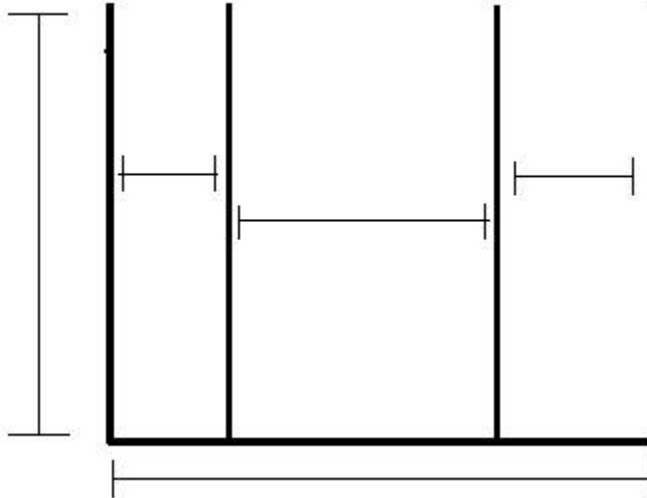

**IMPORTANT:** ONLY USE FINISHED CENTERLINE DIMENSIONS.

MEASURE OVERALL WIDTH FROM FINISHED WALL TO FINISHED WALL AT  
TOP, MIDDLE, AND BOTTOM.

PROVIDE DESIRED WIDTH OF DOOR, NOT TO EXCEED 36",

**OR**

PROVIDE DESIRED WIDTH OF EACH PANEL, NOT LESS THAN 7",

**OR**

PROVIDE DESIRED WIDTH OF DOOR AND 1 PANEL, NOT LESS THAN 7".

**OTHERWISE**

DOOR WILL BE MADE TO A STANDARD SIZE.

MEASURE HEIGHT FROM TOP OF THRESHOLD TO  
DESIRED OVERALL HEIGHT.

PROVIDE HINGE OR PIVOT LOCATION  
(LEFT OR RIGHT).