


HOW TO MEASURE FOR A SINGLE SWING OUT DOOR (Pivot or Hinge)

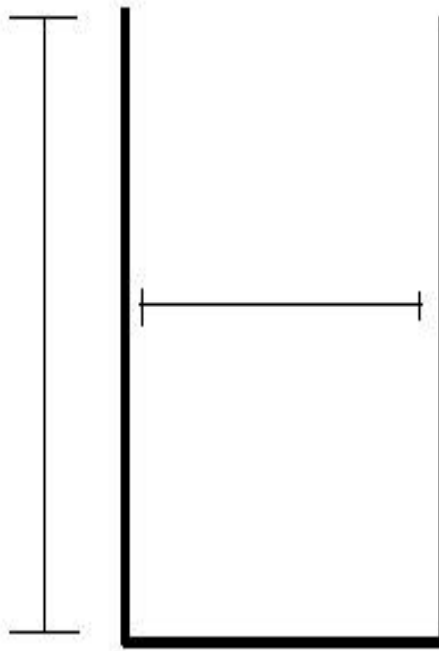

IMPORTANT: ONLY USE FINISHED CENTERLINE DIMENSIONS.

PROVIDE FINISHED WALL TO WALL WIDTH AND DESIRED OVERALL HEIGHT.

MEASURE WIDTH FROM FINISHED WALL TO FINISHED WALL AT TOP, MIDDLE, AND BOTTOM.

MEASURE HEIGHT FROM TOP OF THRESHOLD TO DESIRED OVERALL HEIGHT.

PROVIDE PIVOT OR HINGE LOCATION.

**NOTE: PIVOT NOT AVAILABLE FOR STEAM APPLICATION.
PROVIDE SHOWERHEAD LOCATION FOR STEAM HINGE DOOR.**